

0128 PIVOT SET, CENTER HUNG, NON-HANDED

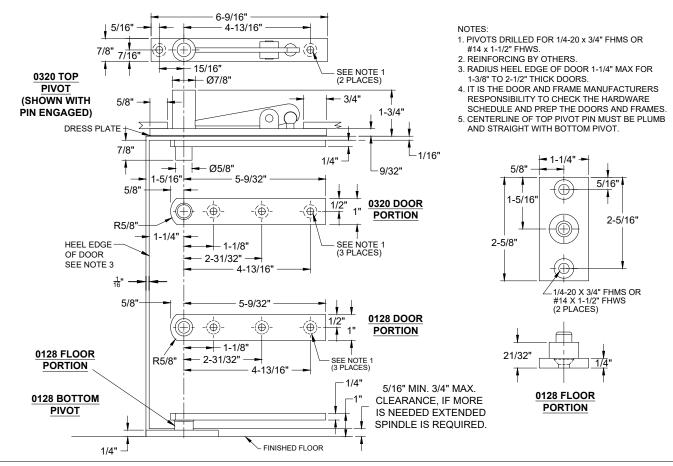

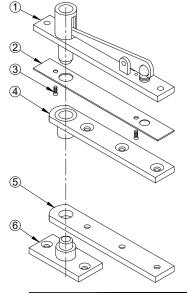


ITEM NO.	QTY.	PART NO.
1	1	0320 JAMB PORTION
2	1	0320 DRESS PLATE
3	2	0320 DRESS PLATE SCREW
4	1	0320 DOOR PORTION
5	1	0128 DOOR PORTION
6	1	0128 FLOOR PORTION


INSTALLATION INSTRUCTIONS


- MEASURE 1-5/16" OUT FROM DOOR JAMB ON CENTERLINE OF DOOR. THIS IS THE LOCATION OF SPINDLE CENTER.
- 2. ROUND HEEL EDGE AND PREPARE DOOR FOR 1/16" MIN. CLEARANCE THRU ENTIRE OPENING.
- 3. INSTALL 0128 DOOR PORTION PER TEMPLATE.
- 4. INSTALL 0128 FLOOR PORTION PER TEMPLATE
- 5. INSTALL 0320 DOOR PORTION PER TEMPLATE.
- 6. INSTALL 0320 JAMB PORTION PER TEMPLATE.
- CENTERLINE OF PIVOT SHOULD ALIGN WITH CENTERLINE OF BOTTOM SPINDLE. USE A PLUMB LINE TO ASSURE ACCURACY.
- 8. SET INSTALLED 0128 DOOR PORTION ON 0128 FLOOR PORTION SPINDLE.
- 9. ENGAGE THE TOP PIVOT PIN BY TURNING PIN RETRACTING SCREW CLOCKWISE.
- 10. FASTEN 0320 DRESS PLATE TO 0320 JAMB PORTION.

DISMOUNT DOOR (IF REQUIRED)

- 1. OPEN THE DOOR ENOUGH TO DISENGAGE THE TOP PIVOT.
- 2. ROTATE THE DOOR TO CLOSED POSITION.
- 3. WITH THE TOP OF THE DOOR LEANING TOWARD YOU, LIFT THE DOOR CLEAR OF THE SPINDLE.







Disclaimer: This template is to be used for installation, as shown, of said product and is not suitable for every application method. Custom applications, where door sizes, weights and conflicting hardware are a factor, need to be addressed with ABH and proper instructions provided. ABH is not liable for failure or performance of the product due to improper installation methods and/or use. Improper use and/or installation of this product will void the standard warranty.

0128-07.DWG

0128 PAGE 1 OF 1

www.abhmfg.com E-mail: abhinfo@abhmfg.com Architectural Builders Hardware Mfg., Inc. 1222 Ardmore Ave., Itasca, IL 60143 630.875.9900; FAX 800.9FAXABH (932.9224)